

# Installation Instruction

<http://www.harmonyworld.com>

## Step 2. OSD Menu Setting Operation Instruction



Push the button "MENU" in the Red Circle above, You will get the Following OSD MENU on the Screen. Again you can move the cursor.

Push the button "+" and "-", You Can change The value of the Subject.

**H\_Position:** Move screen "left and right"

**V\_Position:** Move screen "up and down"

**Width and Height** adjust the display size to be full screen.

**Resolution:** for 10.4", and 8.4" Normally is 640\*480. 12.1" and 15" is 800\*600.

Setting	Advance
H_Position	00
Width	00
U_Position	00
Height	00
Phase	00
Style	RGB(A)
Sync	SEPARATE(HV)
Resistance	75 Ω
Scaming	Progressive
Resolution	800*600
Exit&Save	
Info HS	00.00KHz VS 000.0Hz